





Shower Sealing Systems

1 Alcohol Wipes





The alcohol wipes are for cleaning receptor surfaces to ensure strong adhesion with silicone sealant.

2 Alignment Card

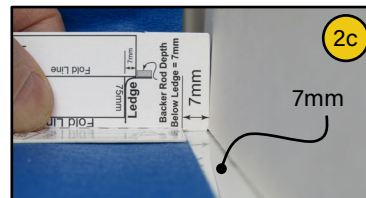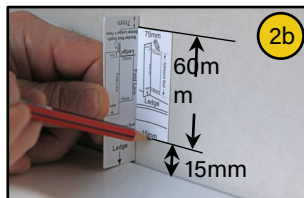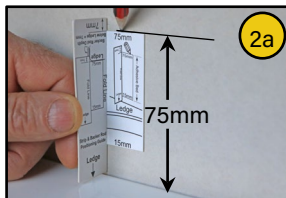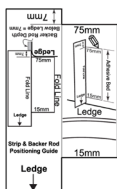


The alignment card allows installers accurately mark the strip height on the wall above the ledge (2a), mark the position of the adhesive bed for the strip if required (2b), and mark the position of the masking tape on the ledge if required (2c).

3 Alignment Wheel

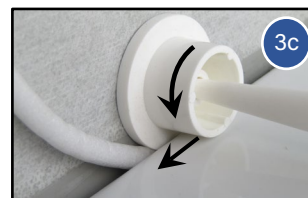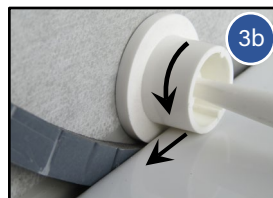

The alignment wheel allows installers accurately position the backer rod on the shower tray/bath sidewall (3a), or with sealant nozzle engaged, roll-press the backer rod into the joint between the installed strip and shower tray/bath sidewall (3b/c).

4 Alignment Guide

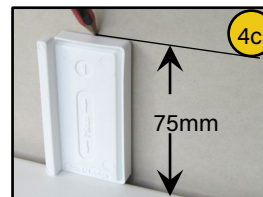

The alignment guide allows installers accurately position the backer rod on the shower tray/bath sidewall (4a/b), it may also be used to mark the strip height on the wall above the ledge (4c).

5 2 Sided Spatula



The double sided spatula (5) is for spreading sealant adhesive and pressing the strip against the wall. The multi-sided spatula (6) also has splayed corners for rubbing up joint sealant between strip and wall.

6 4 Sided Spatula

